

STEP 1

Measure the VipaBoard Bath Panel and cut to the required size.



STEP 2

Insert VipaBoard Bath Panel under bath edge and level.



STEP 3

Adjust the feet to the required height using a 15mm spanner.



STEP 4

If fitting an end panel, apply a bead of VipaTek to the end panel and position the side panel.



STEP 5

Secure the VipaBoard Bath Panel using the PCS screws and washers provided.




STEP 6

Apply PCS Joint Reinforcing Tape to the board edges.


VipaBoard Bath Panel Installation

(Flush Finish)

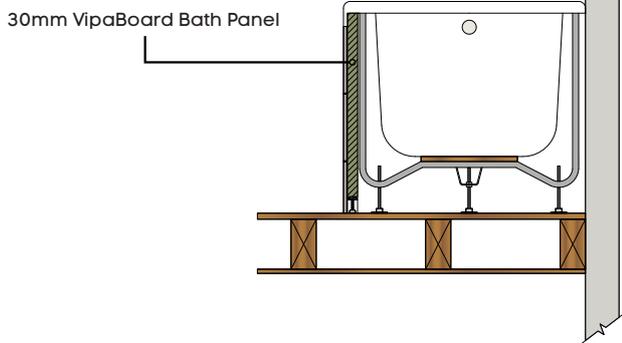

VipaBoard Bath Panel Installation

(With Champagne Ledge)

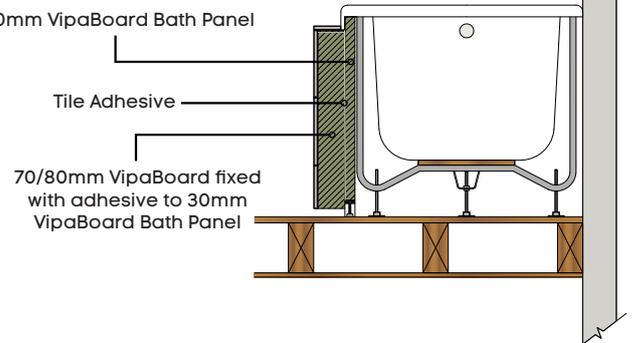

Building Regulations

All information is given as guidance and if adhered to will perform as intended. We fully guarantee the quality of our products, however, as we do not have knowledge of site conditions or the capability of the installer, we cannot accept liability for damage which may arise due to a result of incorrect installation. The information and advice provided by PCS does not override nor supersede building regulations. It is the responsibility of the user to seek professional guidance to ensure PCS products are compatible for their intended use and that the products comply with building regulations.

rev.1