



Preformed VipaBoard Wall Niches are 120mm deep and can be cut to suit the depth of the wall.



Place the VipaBoard Wall Niche in position. Check the wall niche is level, and fix timber battens to secure the VipaBoard Wall Niche in place.



The surrounding wall should be covered using VipaBoard, fixed securely in accordance with the manufacturers instructions.




Once all the boards are securely fastened, if necessary, mark the VipaBoard Wall Niche to identify the depth of cut required.

Using a hand saw, cut the excess off the VipaBoard Wall Niche. Once trimmed, sand down the edges to a smooth finish ready for fitting & waterproofing.


NOTE: The VipaBoard Wall Niche should sit completely flush to the boards, once inserted into the wall.

Building Regulations

All information is given as guidance and if adhered to will perform as intended. We fully guarantee the quality of our products, however, as we do not have knowledge of site conditions or the capability of the installer, we cannot accept liability for damage which may arise due to a result of incorrect installation. The information and advice provided by PCS does not override nor supersede building regulations. It is the responsibility of the user to seek professional guidance to ensure PCS products are compatible for their intended use and that the products comply with building regulations.

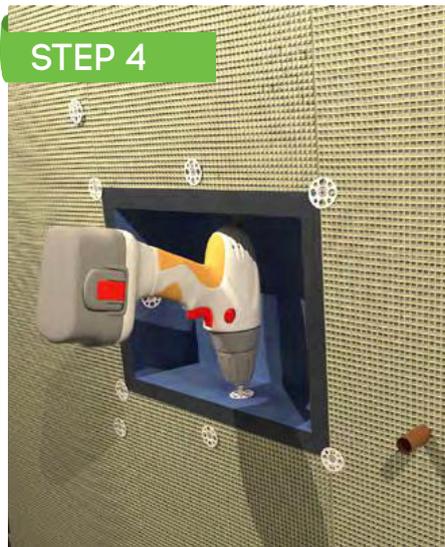

Place the VipaBoard Wall Niche into the wall, checking it is level with the surrounding board. Once level, securely fasten with washers and screws.

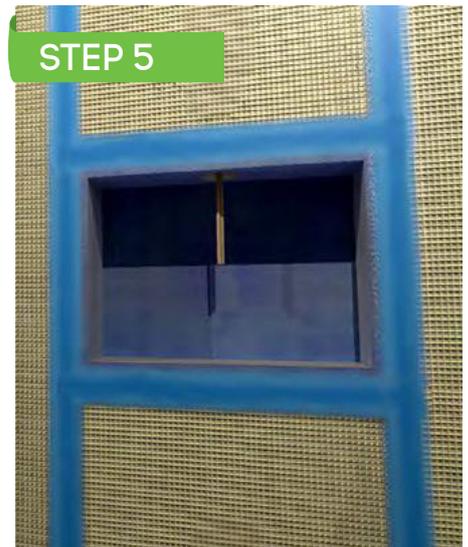

Once the VipaBoard Wall Niche is fitted, it is essential that a suitable waterproofing system is applied over all joints and abutments. Ensure the VipaBoard Wall Niche is fully waterproof before tiles are applied.

It is important that all joints, abutments and fixings to the surrounding tile backer boards are also waterproofed.